

AIR CONDITIONER REMOTE CONTROLLER MANUAL

The design and specifications are subject to change without prior notice for product improvement. Consult with the sales agency or manufacturer for details.

CR206-RG66B3(2H)
16117000001214
20170626

Thank you very much for purchasing our air conditioner.
Please read this owner's manual carefully before using
your air conditioner. Make sure to save this manual for
future reference.

CONTENTS

Remote controller Specifications.....	1
Function buttons	2
Handling the remote controller	4
Remote LCD screen indicators	5
How to use the basic functions.....	6
How to use the advanced functions	13

Remote Controller Specifications

Model	RG66B3(2H)/BGEF, RG66B4(2H)/BGEF
Rated Voltage	3.0V(Dry batteries R03/LR03×2)
Signal Receiving Range	8m
Environment	-5°C~60°C(23°F~140°F)


NOTE:

- Buttons design is based on typical model and might be slightly different from the actual one you purchased, the actual shape shall prevail.
- All the functions described are accomplished by the unit. If the unit has no this feature, there is no corresponding operation happened when press the relative button on the remote controller.
- When there are wide differences between "Remote controller Illustration" and "USER'S MANUAL" on function description, the description of "USER'S MANUAL" shall prevail.

Function Buttons

Before you begin using your new air conditioner, make sure to familiarize yourself with its remote control. The following is a brief introduction to the remote control itself. For instructions on how to operate your air conditioner, refer to the **How to Use The Basic/Advance Functions** section of this manual.

NOTE: Please do not select HEAT mode if the machine you purchased is cooling only type. Heat mode is not supported by the cooling only appliance.

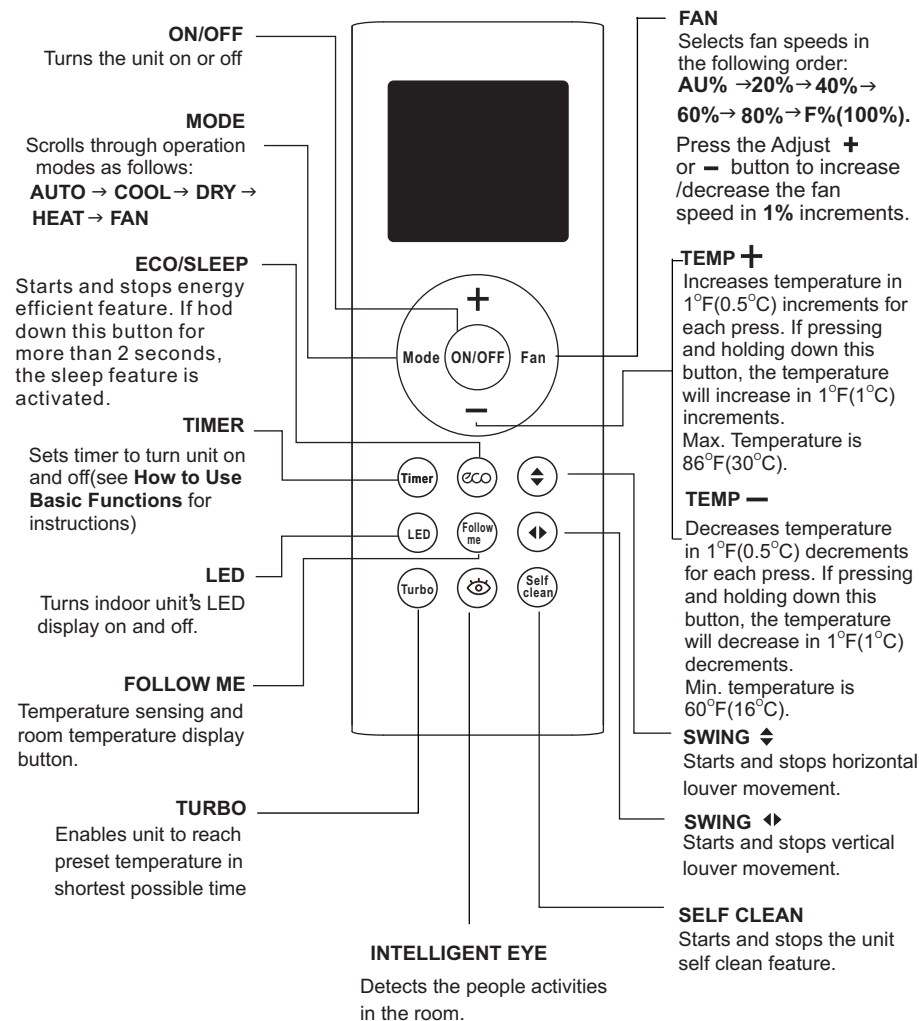


Model: RG66B3(2H)/BGEF

Function Buttons

Before you begin using your new air conditioner, make sure to familiarize yourself with its remote control. The following is a brief introduction to the remote control itself. For instructions on how to operate your air conditioner, refer to the **How to Use The Basic/Advance Functions** section of this manual.

NOTE: Please do not select HEAT mode if the machine you purchased is cooling only type. Heat mode is not supported by the cooling only appliance.

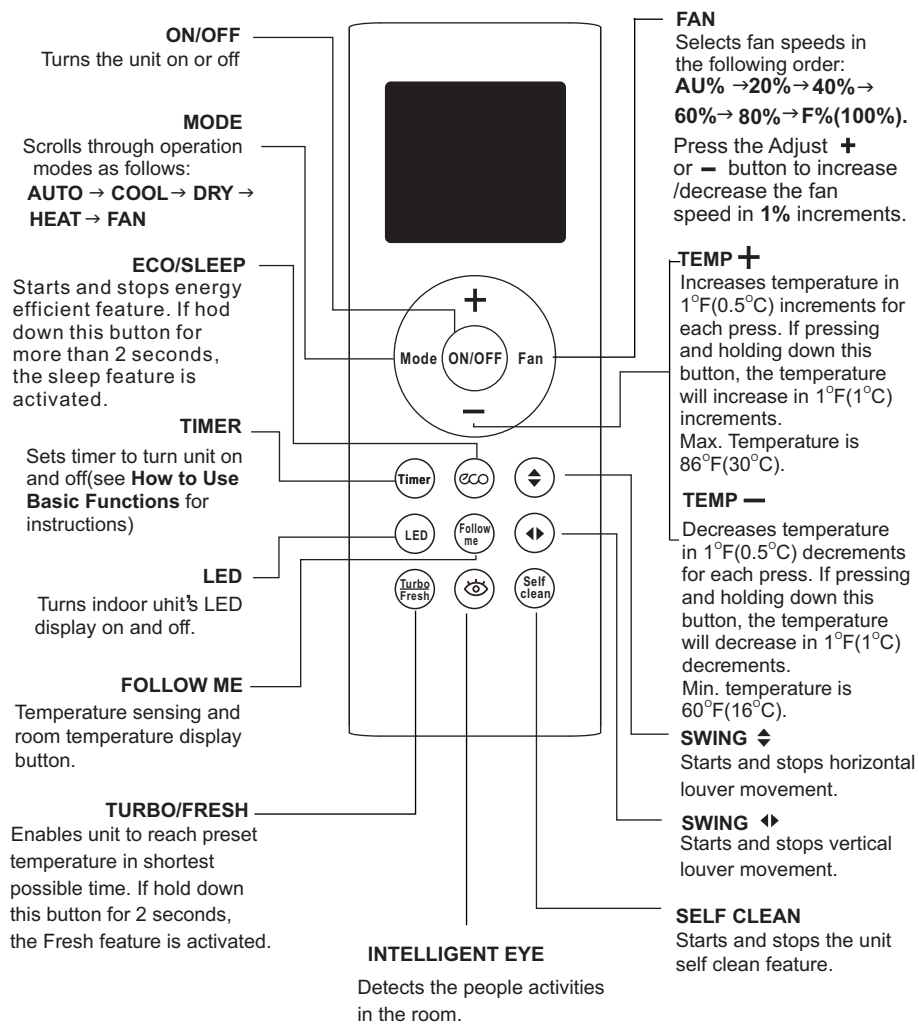

Model: RG66B4(2H)/BGEF

3

HANDLING THE REMOTE CONTROLLER

NOT SURE WHAT A FUNCTION DOES?

Refer to the **How to Use Basic Functions** and **How to Use Advanced Functions** sections of this manual for a detailed description of how to use your air conditioner.

SPECIAL NOTE

- Button designs on your unit may differ slightly from the example shown.
- If the indoor unit does not have a particular function, pressing that function's button on the remote control will have no effect.

INSERTING AND REPLACING BATTERIES

Your air conditioning unit comes with two AAA batteries. Put the batteries in the remote control before use:

1. Remove the back cover from the remote control, exposing the battery compartment.
2. Insert the batteries, paying attention to match up the (+) and (-) ends of the batteries with the symbols inside the battery compartment.
3. Install the back cover on.

INSTALLING REMOTE CONTROL HOLDER

The remote controller can be attached to a wall or stand by using a remote controller holder (optional part, not supplied with the unit).

1. Before installing the remote controller, check that the air conditioner receives the signals properly.
2. Install the holder with two screws.
3. Put the remote controller in the holder.

BATTERY NOTES

For optimum product performance:

- Do not mix old and new batteries, or batteries of different types.
- Do not leave batteries in the remote control if you don't plan on using the device for more than 2 months.




BATTERY DISPOSAL


Do not dispose of batteries as unsorted municipal waste. Refer to local laws for proper disposal of batteries.

TIPS FOR USING REMOTE CONTROL

- The remote control must be used within 8 meters of the unit.
- The unit will beep when remote signal is received.
- Curtains, other materials and direct sunlight can interfere with the infrared signal receiver.
- Remove batteries if the remote control will not be used more than 2 months.
- Prevent any liquid from falling into the remote controller.
- If other electrical appliances react to the remote controller, either move these appliances or consult your local dealer.

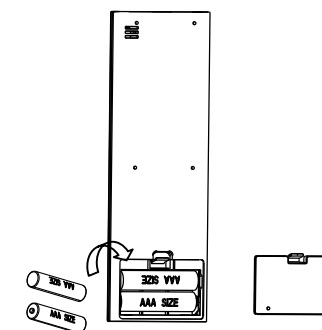

Remove the back cover to install batteries

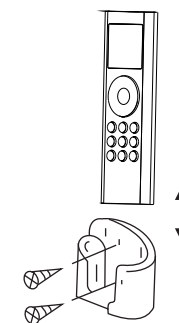

Put the remote controller in the holder.

4

Remote LCD Screen Indicators

Information are displayed when the remote controller is powered up.

ON/OFF display

Appears when the unit is turned on, and disappears when the it is turned off.

Transmission Indicator

Lights up when remote sends signal to indoor unit

MODE display

Displays the current mode, including:

AUTO COOL DRY HEAT FAN

TIMER ON display

(ON)
Displays when TIMER ON is set

TIMER OFF display

(OFF)
Displays when TIMER OFF is set

Horizontal louver auto swing display
Vertical louver auto swing display
Wind flow follow people
Wind flow away from people
Turbo mode display
LOCK feature display
ECO Displays when ECO feature is activated

Battery display

Low battery detection

Temperature/Timer/Fan speed display

Displays the set temperature by default, fan speed or timer setting when using TIMER ON/OFF functions

- Temperature range: 16-30°C/60-86°F
 - Timer setting range: 0-24 hours
 - Fan speed setting range: AU -F%
- This display is blank when operating in FAN mode.

Fan speed display

Displays selected fan speed:

✻	>	1%-10%
✻	>>	11%-20%
✻	>>>	21%-30%

.....
✻ >>>>>>> F%(100%)
✻ >>>>>>> AUTO

This fan speed can not be adjusted in AUTO or DRY mode.

🔇 Silence feature display

✻ Not available for this unit

🌿 Fresh feature display

✻ Not available for this unit

👤 Follow me feature display


🌙 Sleep mode display

✻ Not available for this unit

Note:

All indicators shown in the figure are for the purpose of clear presentation. But during the actual operation only the relative functional signs are shown on the display window.

How To Use The Basic Functions

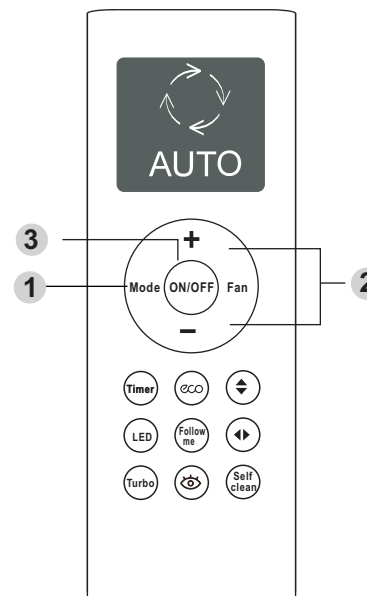

SETTING TEMPERATURE

The operating temperature range for units is 16-30°C/60-86°F. You can increase or decrease the set temperature in 0.5°C/1°F increments.

AUTO operation


In **AUTO** mode, the unit will automatically select the **COOL**, **FAN**, **HEAT** or **DRY** mode based on the set temperature.

1. Press the **MODE** button to select Auto mode.
2. Set your desired temperature using the **Temp +** or **Temp -** button.
3. Press the **ON/OFF** button to start the unit.


NOTE: FAN SPEED can't be set in Auto mode.

COOL operation

1. Press the **MODE** button to select **COOL** mode.
2. Set your desired temperature using the **Temp +** or **Temp -** button.
3. Press the **FAN** button to select the fan speed in a range of Au%-F%, in conjunction with **Temp +** or **Temp -** button.
4. Press the **ON/OFF** button to start the unit.

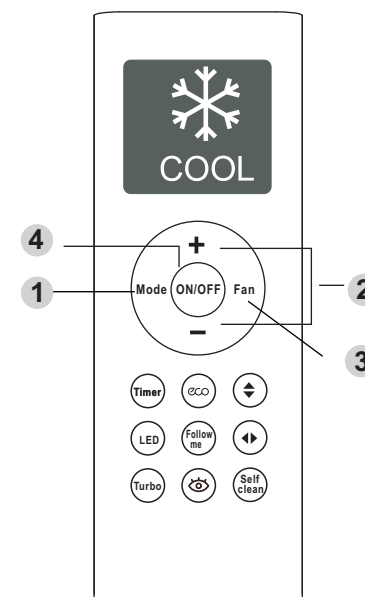

How To Use The Basic Functions

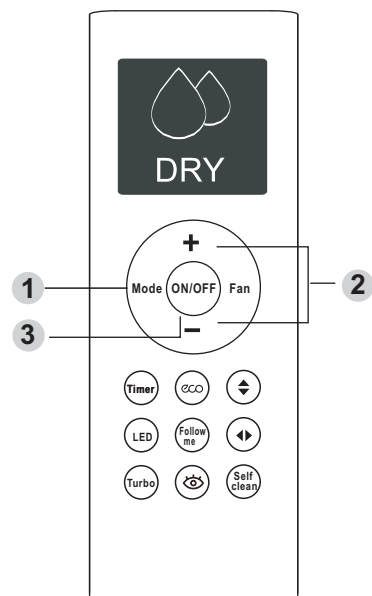

DRY operation(dehumidifying)


1. Press the **MODE** button to select **DRY** mode.
2. Set your desired temperature using the **Temp +** or **Temp -** button.
3. Press the **ON/OFF** button to start the unit.

NOTE: FAN SPEED can't be changed in DRY mode.


FAN operation

1. Press the **MODE** button to select FAN mode.
2. Press the **FAN** button to select the fan speed in a range of Au%-F%, in conjunction with **Temp +** or **Temp -** button.
3. Press the **ON/OFF** button to start the unit.

NOTE: You can't set temperature in FAN mode. As a result, your remote control's LCD screen will not display temperature.

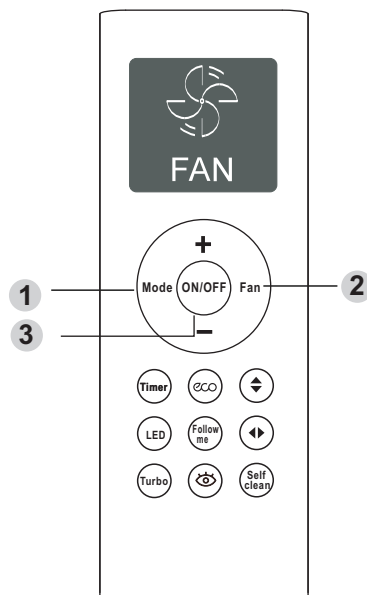

How To Use The Basic Functions

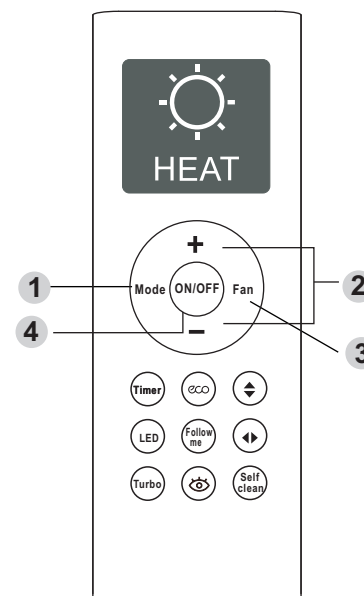

HEAT operation

1. Press the **MODE** button to select **HEAT** mode.
2. Set your desired temperature using the **Temp +** or **Temp -** button.
3. Press the **FAN** button to select the fan speed in a range of Au%-F%, in conjunction with **Temp +** or **Temp -** button.
4. Press the **ON/OFF** button to start the unit.

NOTE: As outdoor temperature drops, the performance of your unit's HEAT function may be affected. In such instances, we recommend using this air conditioner in conjunction with other heating appliance.

Set the angle of air flow

When the unit is on, press the swing  button, to activate the louver. Each time you press the button, it will adjust the louver by 6°. Press the button until the direction you prefer is reached. If press and hold this button for more than 2 seconds, the louver will swing up and down continuously.

When the unit is on, press the swing  button, to activate the louver. Each time you press the button, it will adjust the louver by 6°. Press the button until the direction you prefer is reached. If press and hold this button for more than 2 seconds, the louver will swing left and right continuously.

Setting the TIMER function

Your air conditioning unit has two timer-related functions:

- **TIMER ON**- sets the amount of time after which the unit will automatically turn on.
- **TIMER OFF**- sets the amount of time after which the unit will automatically turn off.

TIMER ON function


The **TIMER ON** function allows you to set a period of time after which the unit will automatically turn on, such as when you come home from work.

1. Press the **Timer** button, the Timer on indicator "⌚" displays and flashes. By default, the last time period that you set and an "h" (indicating hours) will appear on the display.

Note: This number indicates the amount of time after the current time that you want the unit to turn on.

For example, if you set **TIMER ON** for 2.5 hours, " 2.5h " will appear on the screen, and the unit will turn on after 2.5 hours.

2. Press the Temp **+** or Temp **-** button repeatedly to set the time when you want the unit to turn on.
3. Wait 3 seconds, then the **TIMER ON** function will be activated. The digital display on your remote control will then return to the temperature display. The "⌚" indicator remains on and this function is activated.

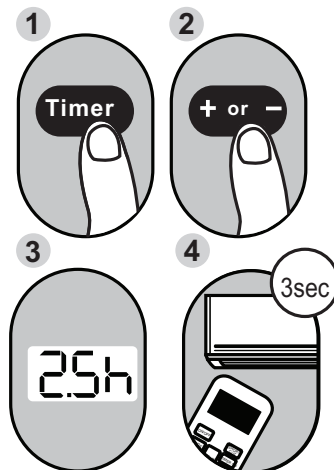

Example: Setting unit to turn on after 2.5 hours.


TIMER OFF function

The **TIMER OFF** function allows you to set a period of time after which the unit will automatically turn off, such as when you wake up.

1. Press the **Timer** button, the Timer off indicator "⌚" displays and flashes. By default, the last time period that you set and an "h" (indicating hours) will appear on the display.

Note: This number indicates the amount of time after the current time that you want the unit to turn off. For example, if you set **TIMER OFF** for 5 hours, " 5.0h " will appear on the screen, and the unit will turn off after 5 hours.

2. Press the Temp **+** or Temp **-** button repeatedly to set the time when you want the unit to turn off.
3. Wait 3 seconds, then the **TIMER OFF** function will be activated. The digital display on your remote control will then return to the temperature display. The "⌚" indicator remains on and this function is activated.

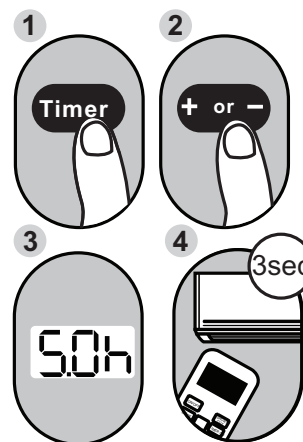

Example: Setting unit to turn off after 5 hours.


NOTE: When setting the **TIMER ON** or **TIMER OFF** functions, up to 10 hours, the time will increase in 30 minute increments with each press. After 10 hours and up to 24, it will increase in 1 hour increments. The timer will revert to zero after 24 hours.

You can turn off either function by setting its timer to " 0.0h " .

Setting both TIMER ON and TIMER OFF at the same time



Keep in mind that the time periods you set for both functions refer to hours after the current time. For example, say that the current time is 1:00 PM, and you want the unit to turn on automatically at 7:00 PM. You want it to operate for 2 hours, then automatically turn off at 9:00 PM.

Do the following:

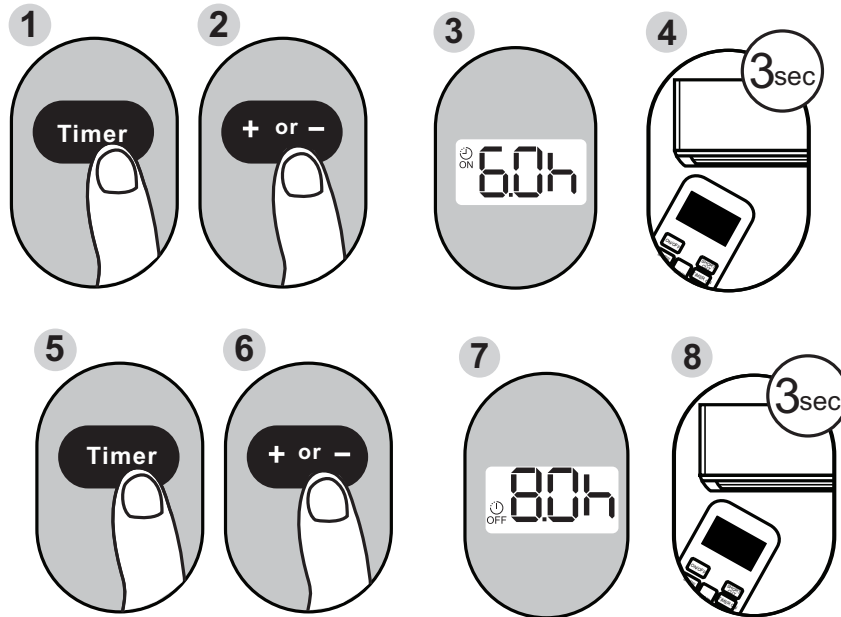

Example: Setting the unit to turn on after 6 hours, operate for 2 hours, then turn off (see the figure below)

Your remote display

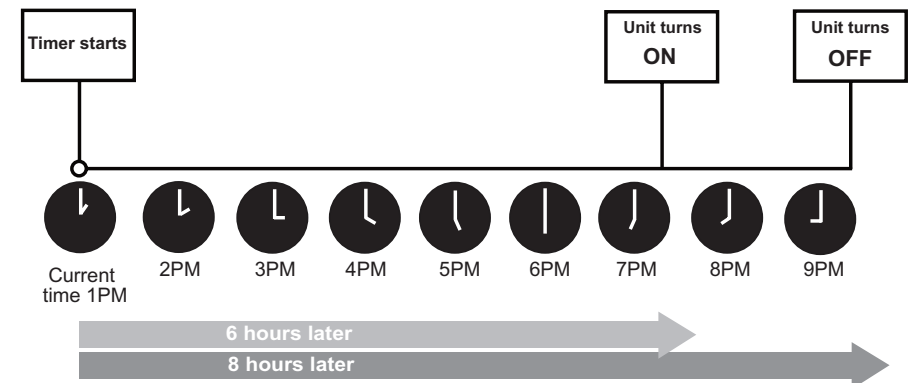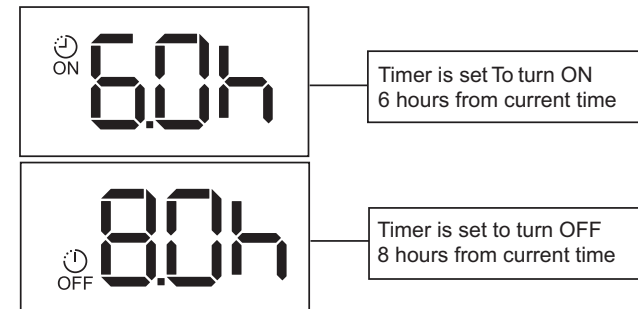

How To Use The Advanced Functions

ECO function

NOTE: This function is only available under COOL mode.

- Used to enter the energy efficient mode.
- Under cooling mode, press this button, the remote controller will adjust the temperature automatically to 24°C, fan speed of Auto to save energy (but only if the set temperature is less than 24°C). If the set temperature is above 24°C, press the ECO button, the fan speed will change to Auto, the set temperature will remain unchanged.

NOTE:

- Pressing the ECO button, or modifying the mode or adjusting the set temperature to less than 24°C will stop ECO operation.
- Under ECO operation, the set temperature should be 24°C or more. It may result in insufficient cooling. If you feel uncomfortable, just press the ECO button again to stop it.

SLEEP Function

The SLEEP function is used to decrease energy use while you sleep (and don't need the same temperature settings to stay comfortable). This function can only be activated via remote control. For the detail, see "sleep operation" in "USER'S MANUAL."


Note: The SLEEP function is not available in FAN or DRY mode. Press ON/OFF, MODE, FAN, TURBO, SELF CLEAN or ECO button will stop sleep operation.

FOLLOW ME function

The Follow me function enables the remote control to measure the temperature at its current location and send this signal to the air conditioner every 3 minutes interval. When using AUTO, COOL, or HEAT modes, measuring ambient temperature from the remote control (instead of from the indoor unit itself) will enable the air conditioner to optimize the temperature around you and ensure maximum comfort.

Silence function

Hold down Fan speed button for 2 seconds to activate/cancel **Silent** mode. Due to low frequency operation of compressor, it may result in insufficient cooling and heating capacity. (applicable to the air conditioner with Silent feature only)

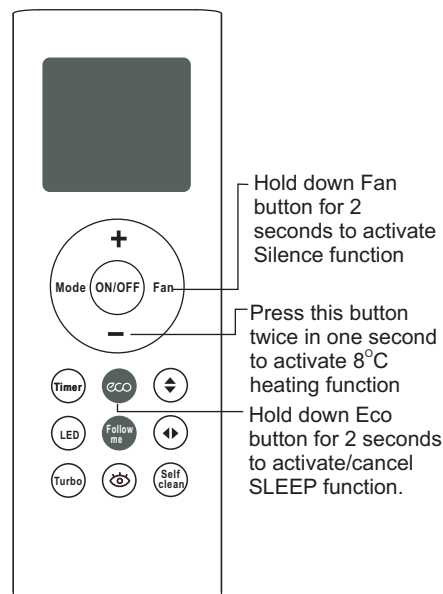

8°C Heating Function

When the air conditioner operates under heating mode with the set temperature of 16°C, press Temp — button twice in one second will activate 8 Degree heating function. The unit will operate at a setting temperature of 8°C. The indoor unit display shows "FP". For some units, press this button can activate 12°C heating feature, please refer to the "Owner's Manual" of the air conditioner.

How To Use The Advanced Functions

TURBO function(TURBO/FRESH) function

The TURBO function makes the unit work extra hard to reach your present temperature in the shortest amount of time possible.

- When you select **TURBO** feature in COOL mode, the unit will blow cool air with strongest wind setting to jump-start the cooling process.
- When you select **TURBO** feature in HEAT mode, for units with Electric heat elements, the Electric Heater will activate and jump-start the heating process.
- Hold down Turbo/Fresh button for 2 seconds, the Fresh feature will be activated. The Ionizer/Plasma Dust Collector (depending on models) is energized and will help to remove pollen and impurities from the air (For model RG66B4(2H)/BGEF only).

SELF CLEAN function

Airborne bacteria can grow in the moisture that condenses around heat exchanger in the unit. With regular use, most of this moisture is evaporated from the unit. When the Self clean feature is activated, your unit will clean itself automatically. After cleaning the unit will turn off automatically.

You can use Self clean feature as often as you like.


Note: You can only activate this function in COOL or DRY mode.

INTELLIGENT EYE function

Press the button to activate wind flow follow people feature, the fan speed is Auto, and the auto swing feature is activated. Press it again to stop and activate the wind flow away people feature. The fan speed is Auto, and the auto swing feature is turned off. Press it the third time to stop the wind flow away people feature.

Note: The Intelligent eye function will stop if you press the other buttons except Timer and LED buttons.

NOTE: Press and hold Temp + and — buttons together for 3 seconds will alternate the temperature display between the °C & °F scale.

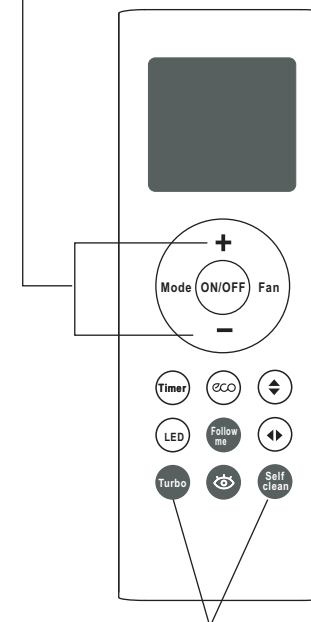

Hold together for one second to activate LOCK function

LOCK function

Press Turbo button and Self clean button simultaneously for one second to lock or unlock the keyboard.

此页无需印刷
技术要求：
80克双胶纸，
140mm*210mm
黑白